### **Glass Balustrade Design – Safety Considerations** Safety Design in Buildings Conference – Muscat 2017 Andy Dean FCIOB, FSFE

Head of Façades

Safety Design in Buildings

Monday, November 06, 2017, Crowne Plaza Muscat

## **Learning objectives**

1. The object of this presentation is to provide an understanding of particular aspects of glass balustrade design in the context of safety

Structure of this presentation – presented by an expert speaker

- bullet points are provided as a speaker aid only



#### **The Presenter**

Andy Dean FCIOB FSFE

> Andy has over 30 years of experience in the field of Building and Construction, ranging from structural testing within the nuclear industry to fire testing. Having established the Dubai Facade Technology Centre and Laboratory in 1997, and operated it for 10 years, he has particular knowledge of heavy structures testing and weathertightness testing of facades, curtain walling and building envelope systems; and business in the Middle East.

> Andy is a Fellow of the Chartered Institute of Building, Fellow of the Society of Façade Engineers (CIBSE) and member of the Glass and Glazing Federation; holding or having held senior committee positions in the local chapters of these organisations.

As a façade consultant he continues to provide input into the GCC codes and is a regular speaker at industry technical seminars across the region. Copyright

4

# **Copyright Materials**

This presentation is protected by international copyright laws. Reproduction, distribution, display and use of the presentation without written permission of the speaker is prohibited.

© WSP Middle East 2017

Safety Design in Buildings

## **Overview**



Source: Glassplan, London

Glass selection

- Balustrade purpose
- Main aspects for safety
- Component factors for safety

**NS**D

## **Glass Selection**



**Source: United Glass, Auckland** 

#### → Glass Selection Factors

- Colour
- Protection
- Privacy
- Solar control
- Building function
- Fire safety
- Weather
- Weight
- Breakage
- Many more...



→ Functions


- Protection
- Separation
- View clarity
- Wind break
- Ventilation
- Solar control

vsp

7

Safety Design in Buildings

## **Glass Selection - for a Balustrade**

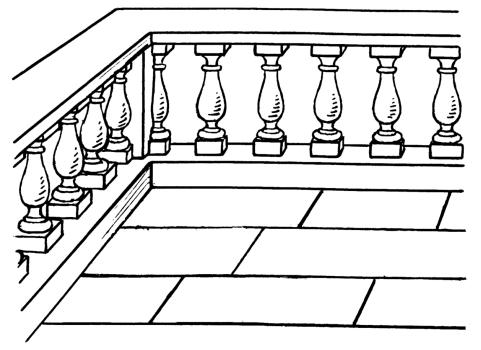

Source: Wikapedia

#### → Functions

- Protection
- Separation
- View clarity
- Wind break
- Ventilation
- Solar control
- Elegant
- Balustre (balaustro, from balaustra, "pomegranate flower")
- Others



Source: Adelaide Balustrade & Fencing

#### → Functions - safety

- Protection
- Separation



**Source: Adelaide Balustrade & Fencing** 

#### → Functions - safety

- Protection / Separation
  - from a hazard
    - a fall
  - wildlife
  - traffic
  - wind



Source: Adelaide Balustrade & Fencing

#### → Functions - safety

- Protection / Separation
  - from a hazard
    - a fall
    - wildlife
    - traffic
    - wind
  - for control
    - in a queue
    - down a stair
    - for a crowd

Safety Design in Buildings

## **Main Safety Characteristics**




Source: UAE F&LS Code of Practice

→ Height

- Typically 1.1m internationally 1.2m in some locations in ME
- → Openings
  - Max opening 100mm
- → Climbability
  - No climbable features up to a certain height (eg. 760mm)
  - Max height may start from a rail
  - Consider the presence of furniture
- → Strength
  - Various loads
  - Various conditions
  - Various limits

## Let's Not Forget Windows - Some Similarities

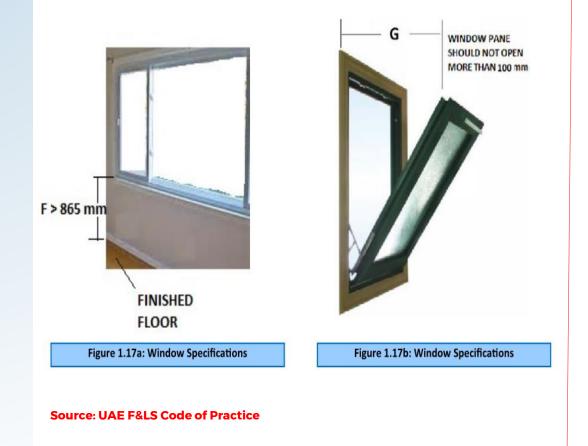


A window can provide access to a hazard if opened – effectively becoming a balustrade

#### → Distance to Window from FFL

- Usually lower than windows
- → Openings
  - Max opening 100mm
    - sometimes more is allowed
- → Climbability
  - Climbable features should be limited
  - The distance limit may start from a climbable feature (e.g. a transom)

Safety Design in Buildings

## Strength

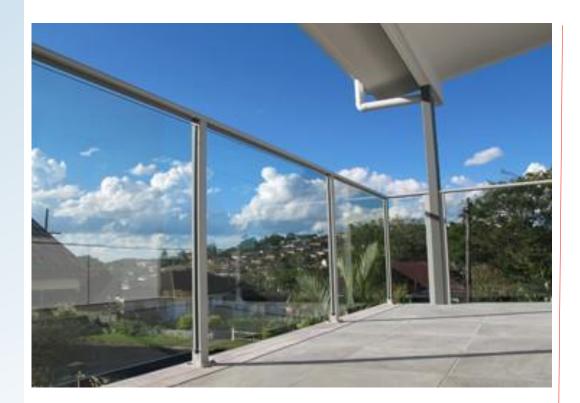

### → Strength

- Various loads
- Various conditions
- Various limits

Source: Oxworks

**\\S**[]

## **Strength - Load Sources**




#### Source: Oxworks

→ Strength

- Various loads
  - people
  - wind
  - impact
- Various conditions
- Various limits

## **Strength - Load Conditions**

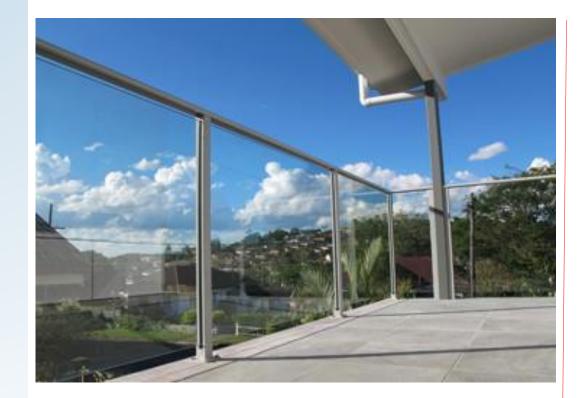

#### Source: Oxworks

→ Strength

- Various loads
  - people
  - wind
  - impact
- Various conditions
  - point load
  - UDL
  - Post, panel, rail, etc
- Various limits

**Safety Design in Buildings** 

## **Strength - Load Limits / Magnitudes**



#### Source: Oxworks

#### → Strength

- Various loads
  - people
  - wind
  - impact
- Various conditions
  - point load
  - UDL
  - Post, panel, rail, etc
- Various limits
  - 0.89kN at any point generally?
  - 1.5kN people?3.0kN crowd?

  - 4.0kPa wind?
  - Reduction of DWP by 0.4kPa on an external balustrade?

17

## **Strength - Aspects to Consider**



Source: Yes Glazing Solutions

#### → Strength Aspects

- Safety factors 4
- Post-breakage safety
- Post-breakage capacity
- Methods of capturing the glass
- Calculation of stresses
- Deflection versus stress
- The handrail

Safety Design in Buildings

## **Components - Glass**



#### → Components - Glass

May be an infil panel

## ۱SD

## **Components - Glass**



#### Source: SHS Products

### → Components - Glass

- May be an infil panel
- May provide the whole structure (cantilever)
- Should not be monolithic
  - potentially limited post-breakage safety
- Therefore laminated
  - two layers bonded by a polymer

20

## **Components - Glass - Glass Used in a Laminate**




### → Components - Glass

- May be an infil panel
- May provide the whole structure (cantilever)
- Should not be monolithic

   potentially limited post-breakage safety
- Therefore laminated
  - two layers bonded by a polymer
- Unlikely to be annealed glass
- Could be heat-strengthened (HS)
- Could be fully-tempered (FT) (take care with FT glass)


### **Components - Glass - Kinds / Types - Annealed**

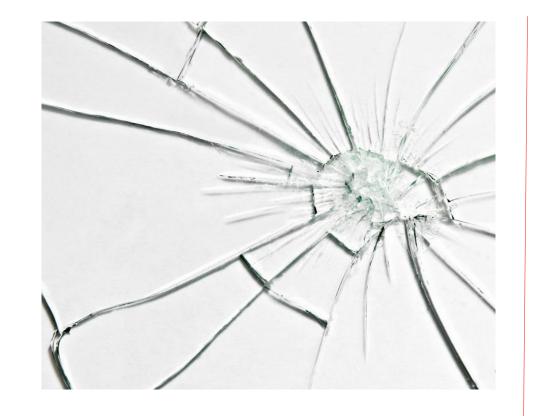

### → Components – Glass - Kinds

- Annealed glass
  - float glass
  - relatively weak
  - susceptible to thermal cracking
- Heat-strengthened (HS)
- Fully-tempered (FT) (also called toughened)

## **Components - Glass - Kinds / Types - Heat Strengthened**

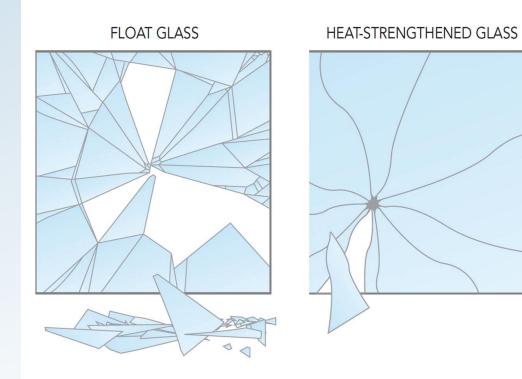

**Source: Crystal India** 

### → Components – Glass - Kinds

- Annealed glass
- Heat-strengthened (HS)
  - 2 x strength of annealed
  - not susceptible to thermal cracking
  - not susceptible to NiS cracking
  - Fully-tempered (FT) (also called toughened)

## **Components - Laminated FT Glass - Fully Tempered**



#### Source: GGF

#### → Components – Glass - Kinds

- Annealed glass
- Heat-strengthened (HS)
- Fully tempered (FT)
  - 5 x strength of annealed
  - not susceptible to thermal cracking
  - susceptible to NiS cracking
- FT in a laminated form...
  - it loses all of its strength on cracking,
  - but retains all of its mass.

## **Components – Laminated FT Glass** - Various Interlayers



#### Source: GGF

#### → Components – Laminated FT Glass

- These videos show:
  - 1. a PVB interlayer
  - 2. a structural interlayer (SentryGlasPlus)
- The difference is the postbreakage safety / capacity
- Consider the temperature when calculating capacity.
   Calcs typically done at 22°C may fail at 50°C.

## **Components – Posts and Fixings**



**Source: Stairs Direct** 

#### → Components – Posts and Fixings

- Posts may provide the support
- There may be a combination of post, panel and handrail
- Fixings capture the glass from the posts
- Consider deflection versus stress
  - deflection may not be a concern in high wind load applications

## **Components – Posts and Fixings**



#### **Source: Mirrors and Glass UK**

#### → Components – Posts and Fixings

- Posts may provide the support
- There may be a combination of post, panel and handrail
- Fixings capture the glass from the posts
- Consider deflection versus stress
  - deflection may not be a concern in high wind load applications
- The highest stresses are likely to be at the fixings

**\\S**])

Safety Design in Buildings

## **Components – Base Channel**



cantilever glass balustrade like this

→ Components – Base Channel

Many calculations show a

Source: Pinterest

28

**\\S**|

## **Components – Base Channel**



#### → Components – Base Channel

- But the reality is more like this
- Fine, but the calculation must reflect the reality


Source: SZG Class

## **Components - Base Channel**

#### BRITISH STANDARD

BS 6180:2011

Figure B.2 Typical clamping systems for free-standing toughened glass balustrades (continued)

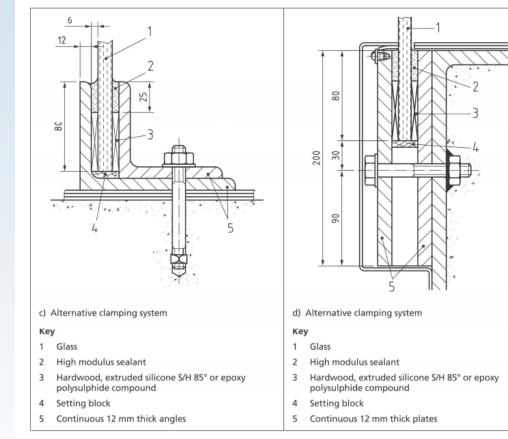

#### → Components – Base Channel

- Guidance from the Standards
- Provide either:

- packing and a high modulus sealant (as per the image)

- a grout and weather seal (so, in the context of the image, 3 would be grout, and 2 would be a low modulus weather seal)

 This is often incorrectly only packing and weather seal – therefore offering limited support

Source: BS 6180

## **Components - Base Channel**



### → Components – Base Channel

- Alternatively use proprietary systems
- Suggest asking for test reports
- Consider testing all types (sustained load – not just impact)

Source: Pure Vista

## **Components - Handrail**



#### → Components - Handrail

- Contributes to load capacity?
- Connects multiple panels
- Protects the glass edge from you
- Protects you from the glass edge

Source: DuPont

## **Components - Handrail**



### → Components - Handrail

- Contributes to load capacity?
- Connects multiple panels
- Protects the glass edge from you
- Protects you from the glass edge
- Necessary on a stair

## **Components - Handrail**



**Source: Frameless Impressions** 

### Components - Handrail

- Contributes to load capacity?
- Connects multiple panels
- Protects the glass edge from you
- Protects you from the glass edge
- Necessary on a stair
- Consider the material
  - bare metal in the ME can get hot (coated metal is usually cooler)
- Consider the shape no surfaces for ornaments / objects / etc
- May be required by some authorities if the hazard is a fall

## Summary



### → Summary

- Consider all of the conditions of the application and legal requirements
- Select the glass carefully
- Consider post-breakage safety
- Make sure that the support condition is represented in the calculations
- Review the interaction of the components and where they are required.

# Thank you!

Andy Dean andy.dean@wsp.com

wsp.com